FRONT

CARD EDGE (TRIM)

BLEED 1/16 in: RUN BACKGROUNDS TO THE OUTER EDGE

SAFE LINE 1/8 in: KEEP TEXT, LOGOS AND PHOTOS INSIDE

TEMPLATE GUIDES: REMOVE BEFORE SENDING

BACK

CARD EDGE (TRIM)

BLEED 1/16 in: RUN BACKGROUNDS TO THE OUTER EDGE


SAFE LINE 1/8 in: KEEP TEXT, LOGOS AND PHOTOS INSIDE

TEMPLATE GUIDES: REMOVE BEFORE SENDING

CR80 ID card template: portrait, no slot punch, no exposed chip


Print this page at 100% ("Actual size"), not "Fit to page", then check the rulers. Pages 1 and 2 are the front and back templates.

Available on every card stock we print.

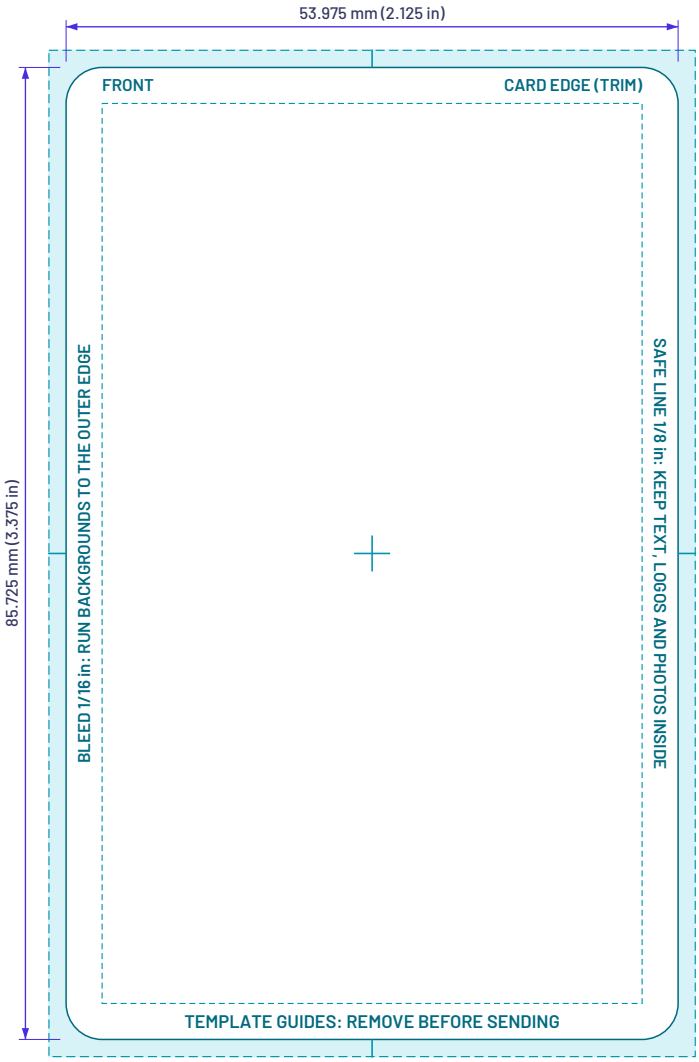


ENLARGED 1.5:1 · THE FRONT

ACTUAL SIZE: LAY A REAL CARD HERE

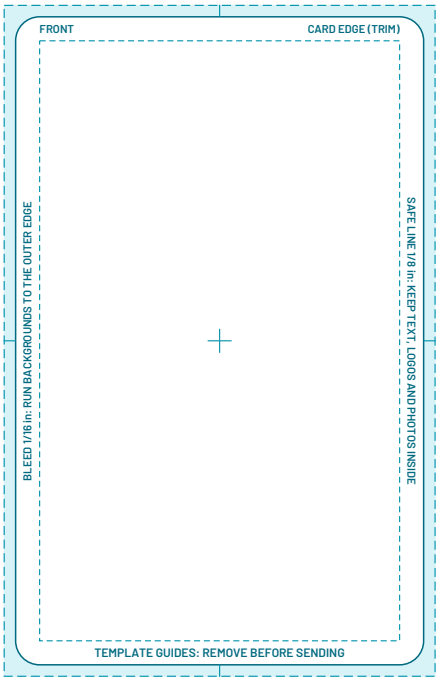

CHECK THE PRINT SCALE

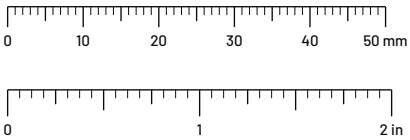

If a ruler doesn't measure exactly 50 mm or 2 in, the page was scaled: print it again at 100% (Actual size).

LATEST VERSION

Scan or visit instantcard.net/card-layout-and-artwork/ for the latest templates and numbers.

KEY NUMBERS (PX AT 300 DPI)

Card (trim)	2.125 x 3.375 in · 53.975 x 85.725 mm · 638 x 1013 px
With bleed	2.25 x 3.5 in · 57.15 x 88.9 mm · 675 x 1050 px
Bleed, each side	1/16 in · 1.5875 mm · 18.75 px
Safe margin	1/8 in · 3.175 mm · 38 px (our studio's minimum: 20 px, 1.7 mm)
Corner radius	1/8 in · 3.175 mm (ISO allows 2.88 to 3.48 mm)
Thickness	0.030 in (30 mil) · 0.76 mm (ISO allows 0.68 to 0.84 mm)

THE RULES

1. Run background art to the bleed edge, 1/16 in (1.6 mm) past the card edge on every side.
2. Keep text, logos, photos, barcodes and QR codes inside the safe line, 1/8 in (3.2 mm) from the edge.
3. Page 2 is the back: the front turned over left to right.
4. Send RGB artwork at 300 dpi, 675 x 1050 px with bleed. Hide or delete the guide layers first.

Sources: ISO/IEC 7810:2019 (size, corners, thickness); InstantCard production data (bleed, pixel sizes, margins).

Version 1.0.0, reviewed 2026-11-09 by InstantCard production team. CC BY 4.0 (creativecommons.org/licenses/by/4.0/): free to use and share with credit to "InstantCard, instantcard.net/card-layout-and-artwork".